HOME
DECORATORS
C O L L E C T I O N

BF-25139 4 DRAWER CART 29″H×21″W

INV#16061

ASSEMBLY INSTRUCTIONS

Made In China

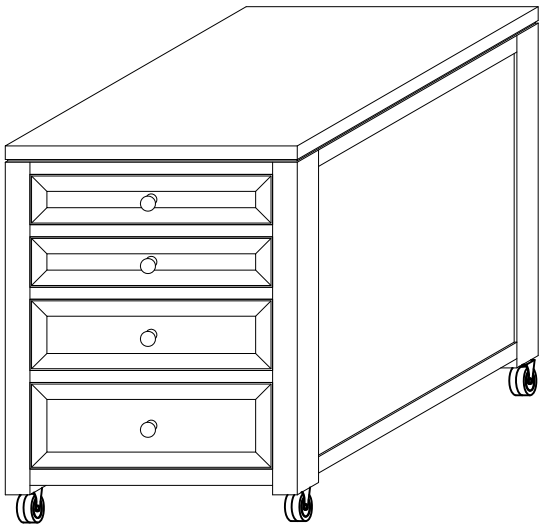

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A  TOP PANEL-1PC	B  BOTTOM PANEL-1PC	C 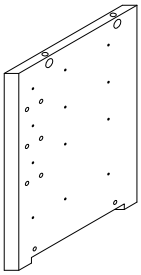 LEFT SIDE PANEL-1PC
D 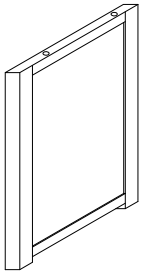 RIGHT SIDE PANEL-1PC	E  ADORNING PANEL-1PC	F 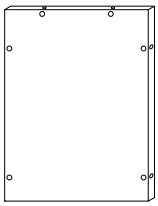 BACK PANEL-1PC
G  ACROSS PANELS-3PCS	H  SMALL DRAWER PANEL FRONTS-2PCS	I 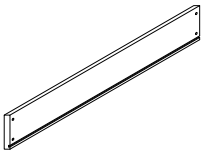 SMALL DRAWER LEFT PANEL SIDES-2PCS
J 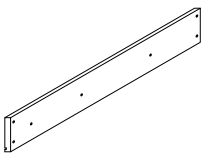 SMALL DRAWER RIGHT PANEL SIDES-2PCS	K SMALL DRAWER PANEL BACKS-2PCS	L 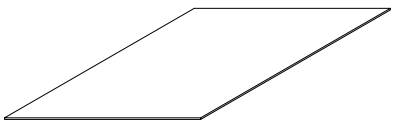 DRAWER PANEL BOTTOMS-4PCS

M  LARGE DRAWER PANEL FRONT-1PC	N 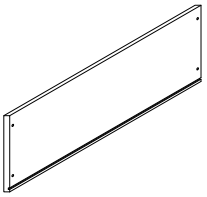 LARGE DRAWER LEFT PANEL SIDE-1PC	O 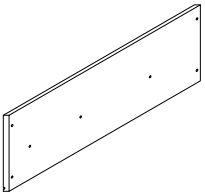 LARGE DRAWER RIGHT PANEL SIDE-1PC
P LARGE DRAWER PANEL BACK-1PC	Q  MIDDLE DRAWER PANEL FRONT-1PC	R 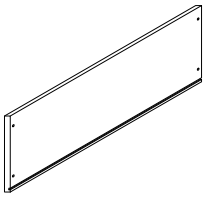 MIDDLE DRAWER LEFT PANEL SIDE-1PC
S 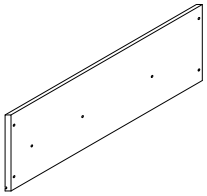 MIDDLE DRAWER RIGHT PANEL SIDE-1PC	T  MIDDLE DRAWER PANEL BACK-1PC	U 6mm × 1"  SCREWS-32PCS
V 6mm × 1/2"  SCREWS-48PCS	W 8mm × 5/8" SCREWS-4PCS	X KNOBS-4PCS
Y 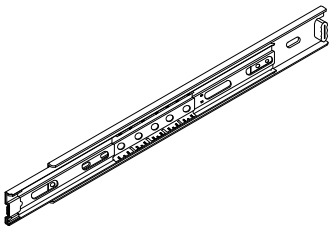 OUTER SLIDES-8PCS	Z 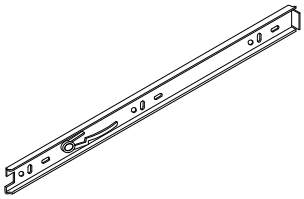 INNER SLIDES-8PCS	A1 11mm × 1"  BOLTS-4PCS
B1  ALLEN WRENCH-1PC	C1 CASTERS-4PCS	D1 SPANNER-1PC

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

E1  CAM-BOLTS-16PCS	F1 CAM-LOCKS-16PCS	G1 CAM-TOOL-1PC
H1 8mm × 1"  SCREWS-3PCS	I1  DOWELS-6PCS	J1  WRENCH-1PC

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: ● UPON OPENING THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

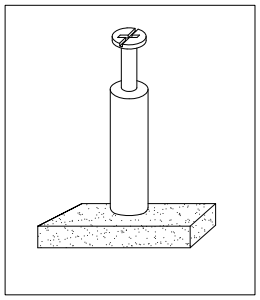

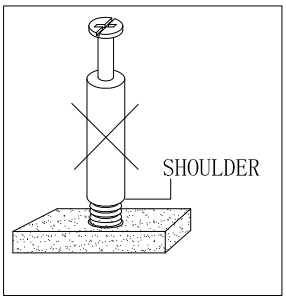

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

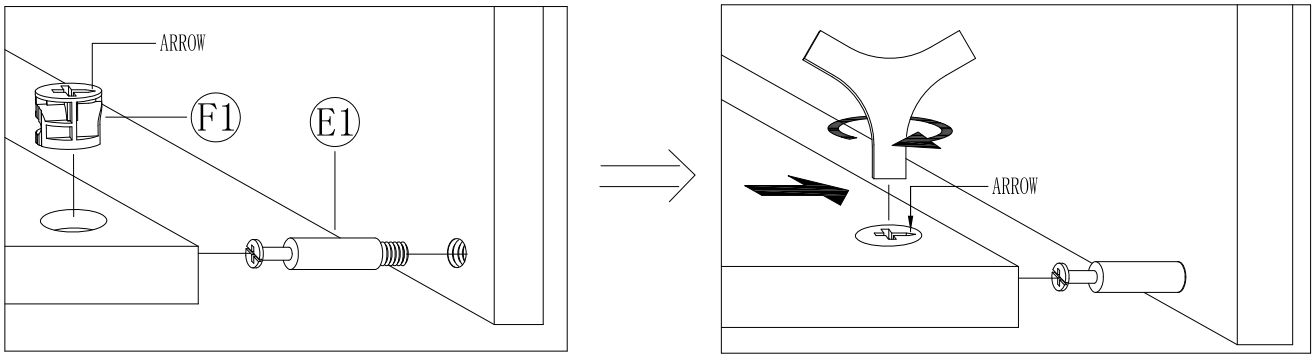

NOTE: ● THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

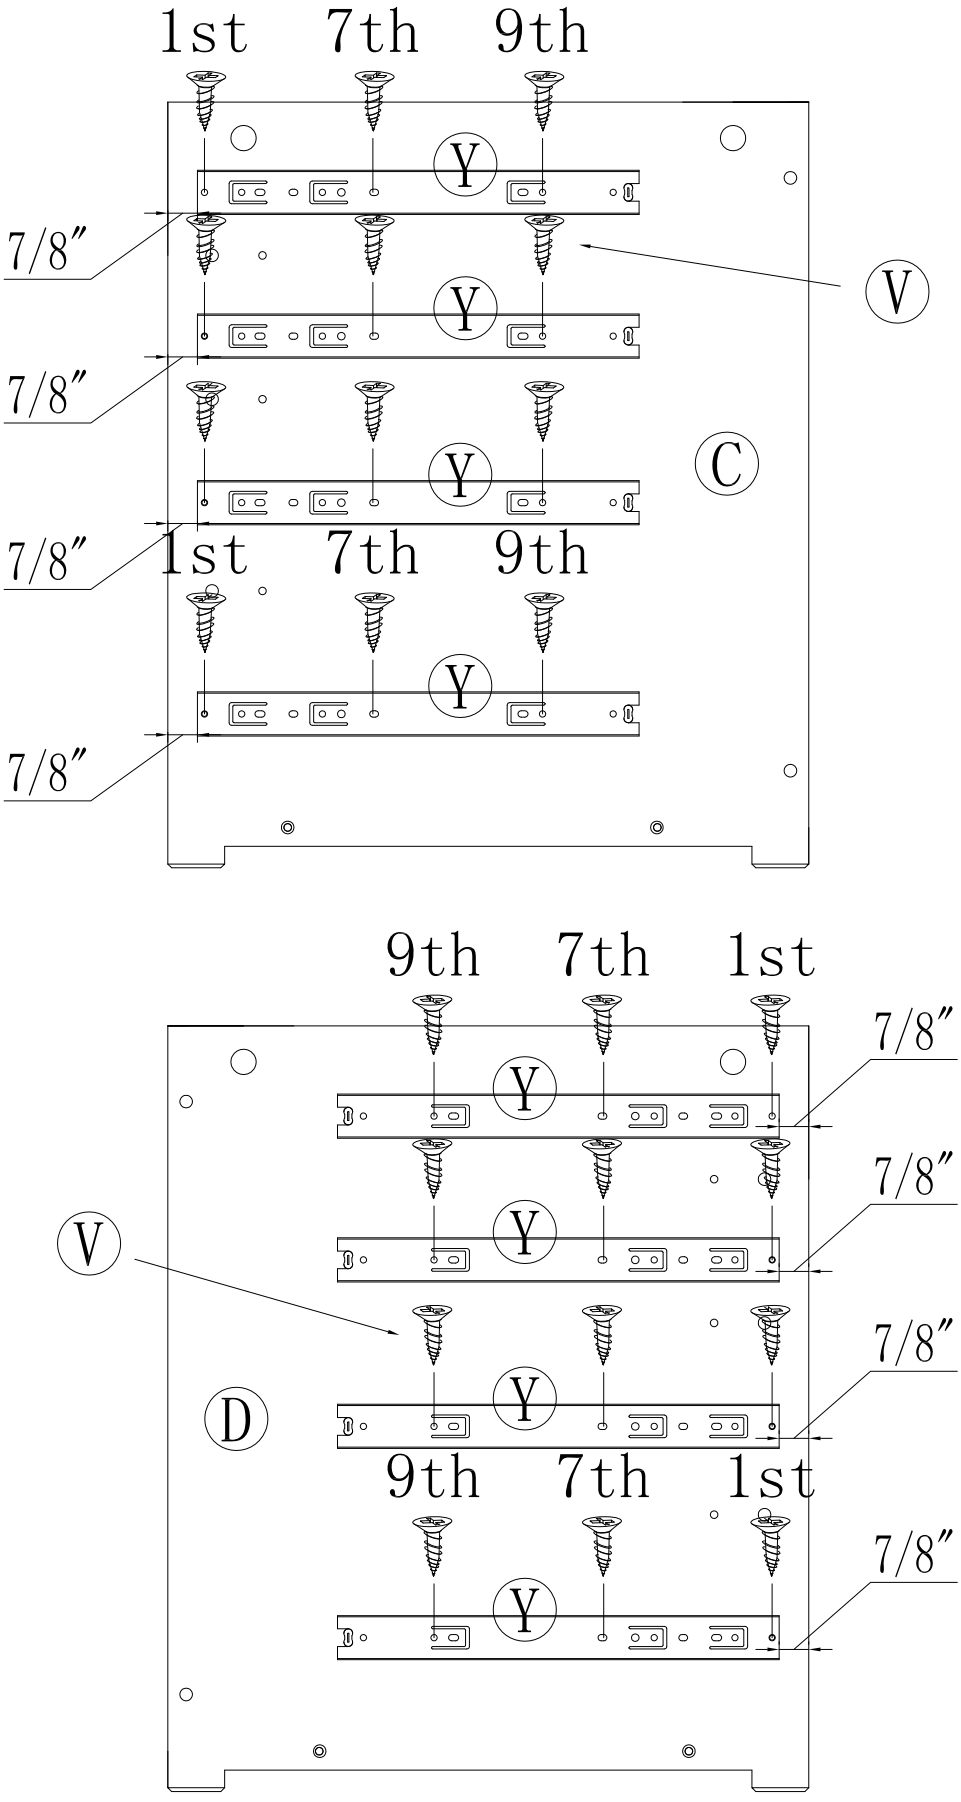

1). ASSEMBLE THE OUTER SLIDES(Y).

● ATTACH THE OUTER SLIDES(Y) TO SIDE PANEL(C/D) USING 24 SCREWS(V).

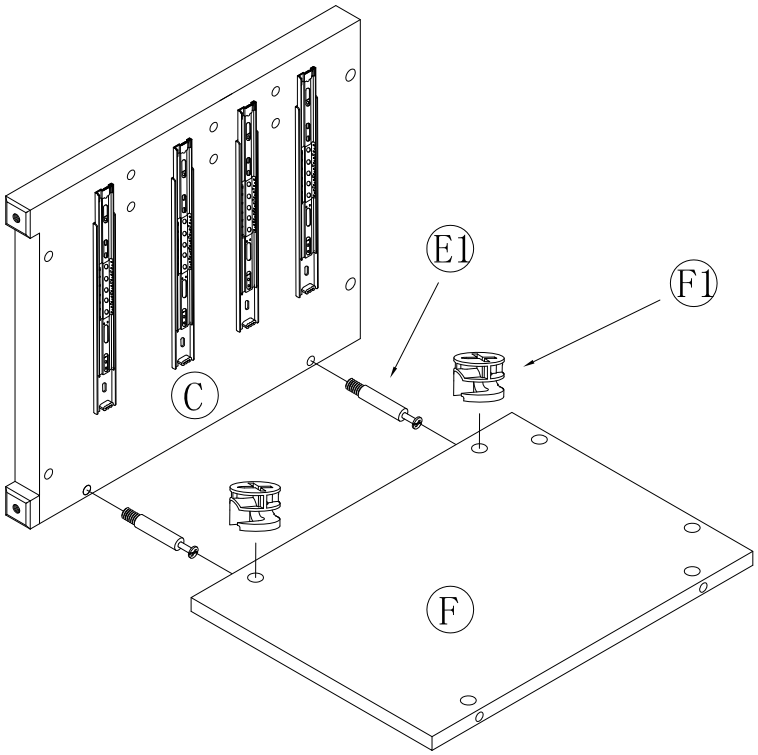

2). ASSEMBLE THE LEFT SIDE PANEL(C).

- ROTATE 2 CAM-BOLTS(E1) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE 2 CAM-BOLTS(E1) INTO THE HOLES IN THE BACK PANEL(F) AND ATTACH USING 2 CAM-LOCKS(F1).

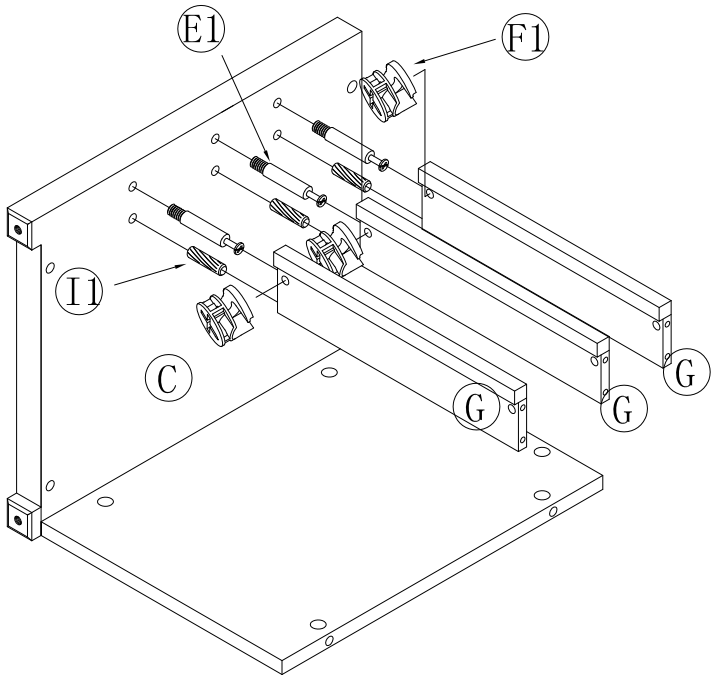

3). ASSEMBLE THE ACROSS PANEL(G).

- ROTATE 3 CAM-BOLTS(E1) AND INSERT 3 DOWELS(I1) INTO THE HOLES IN THE LEFT SIDE PANEL(C).
- PLACE 3 CAM-BOLTS(E1) INTO THE HOLES IN THE ACROSS PANELS(G) AND ATTACH USING 3 CAM-LOCKS(F1).

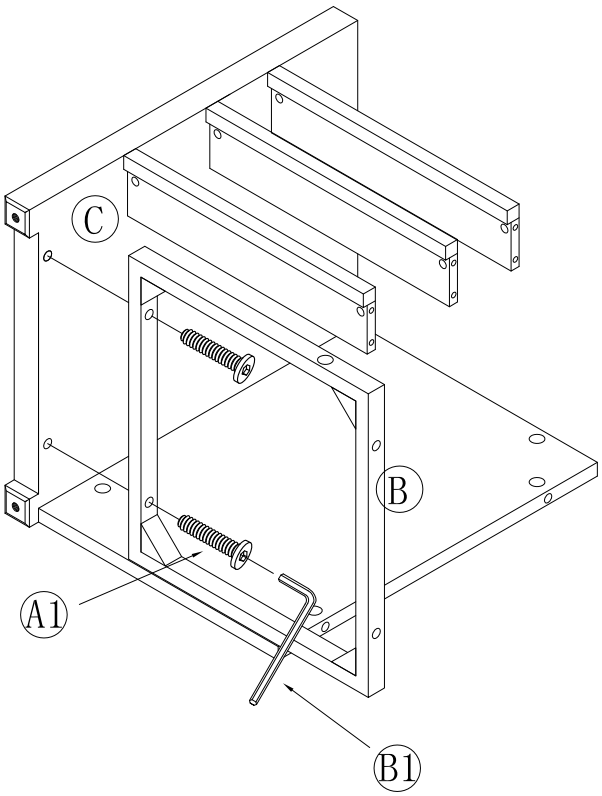

4). ASSEMBLE THE BOTTOM PANEL(B).

- ATTACH THE BOTTOM PANEL(B) TO LEFT SIDE PANEL(C) USING 2 BOLTS(A1).

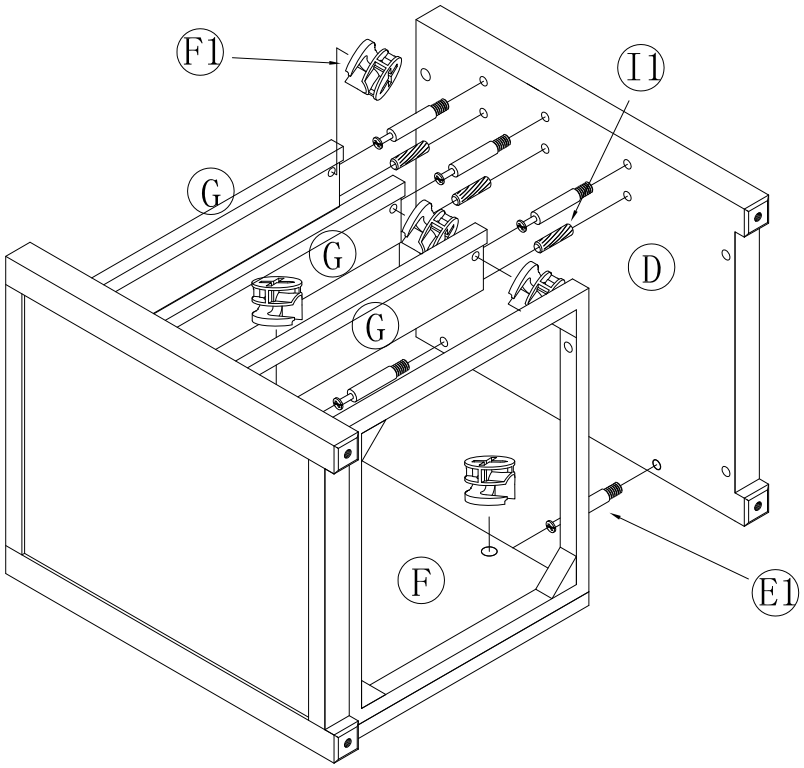

5). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ROTATE 5 CAM-BOLTS(E1) AND INSERT 3 DOWELS(I1) INTO THE HOLES IN THE RIGHT SIDE PANEL(D).
- PLACE 5 CAM-BOLTS(E1) INTO THE HOLES IN THE PANEL(G/F) AND ATTACH USING 5 CAM-LOCKS(F1).

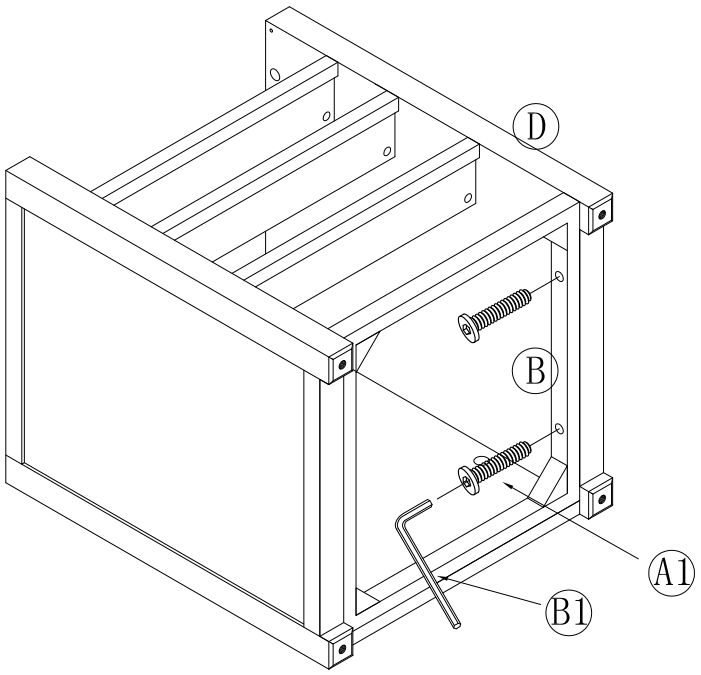

6). ASSEMBLE THE BOTTOM PANEL(B).

● ROTATE 2 BOLTS(A1) INTO THE HOLES IN THE BOTTOM PANEL(B).

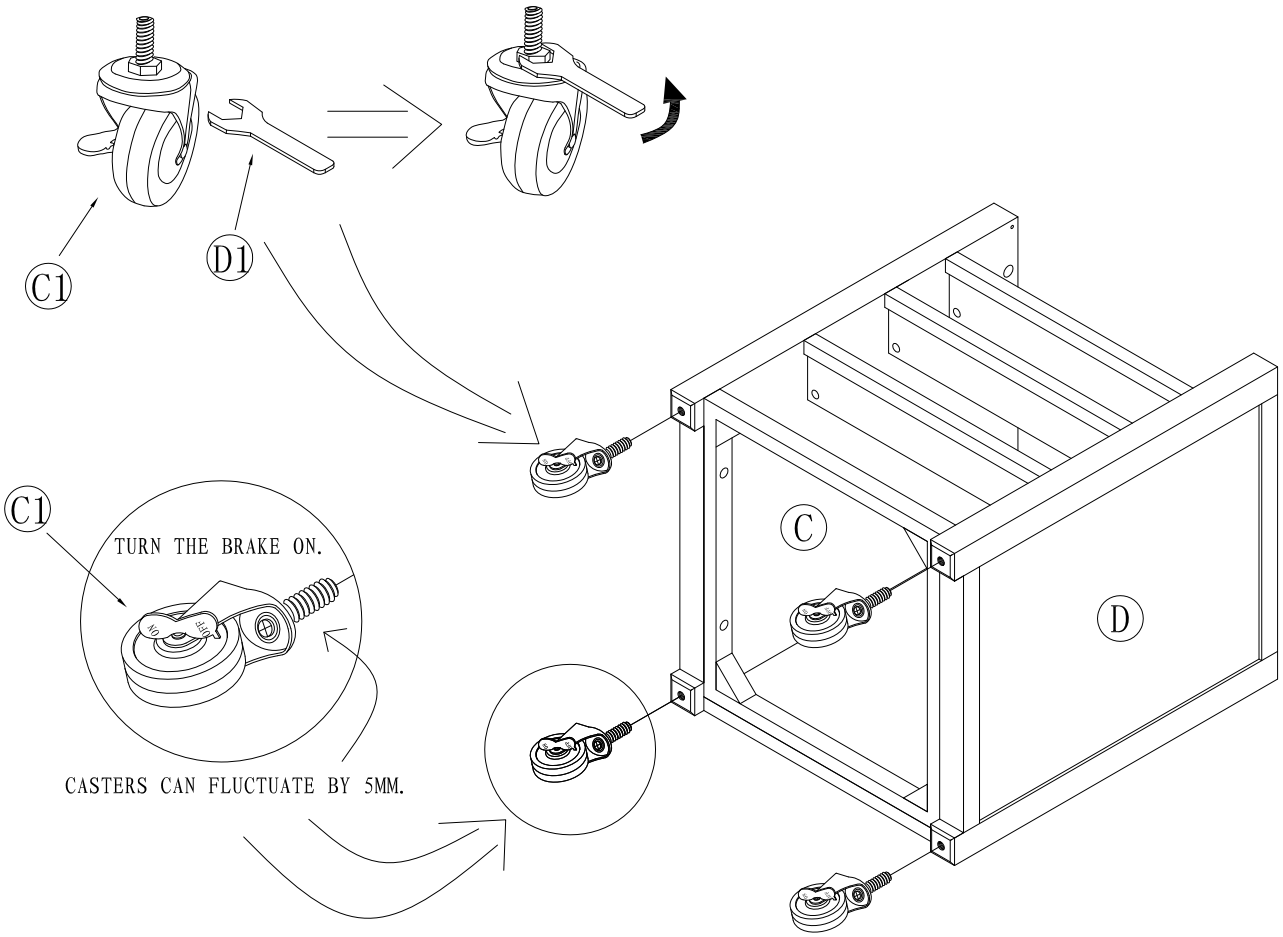

7). ASSEMBLE THE CASTERS(C1).

● ROTATE 4 CASTERS(C1) INTO THE HOLES IN THE SIDE PANEL(C/D) USING SPANNER(D1).

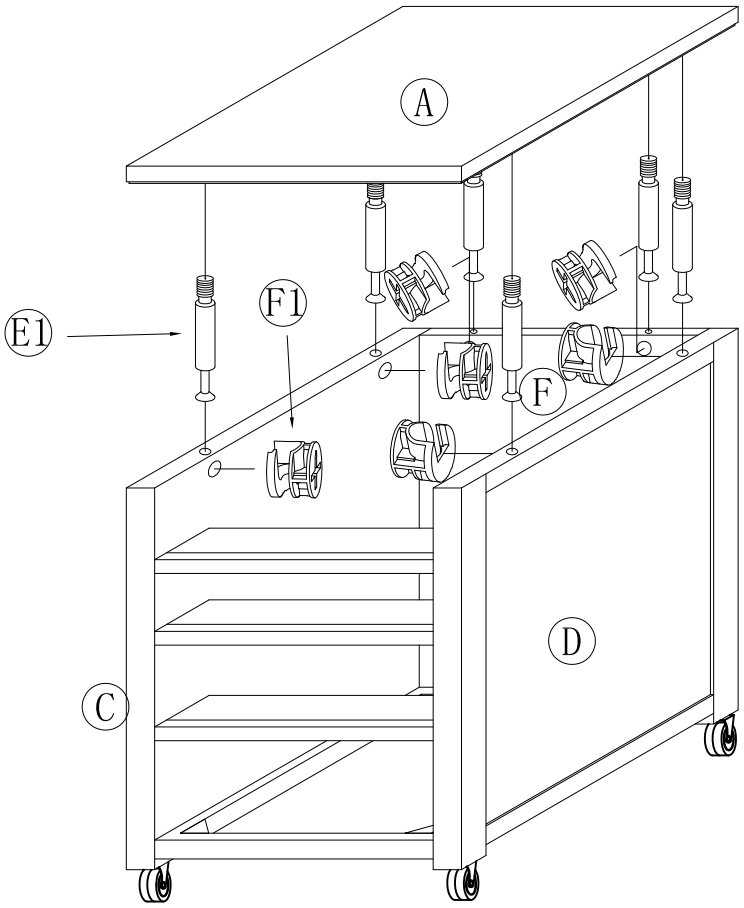

8). ASSEMBLE THE TOP PANEL(A).

- ROTATE 6 CAM-BOLTS(E1) INTO THE HOLES IN THE TOP PANEL(A).
- PLACE 6 CAM-BOLTS(E1) INTO THE HOLES IN THE PANEL(C/D/F) AND ATTACH USING 6 CAM-LOCKS(F1).

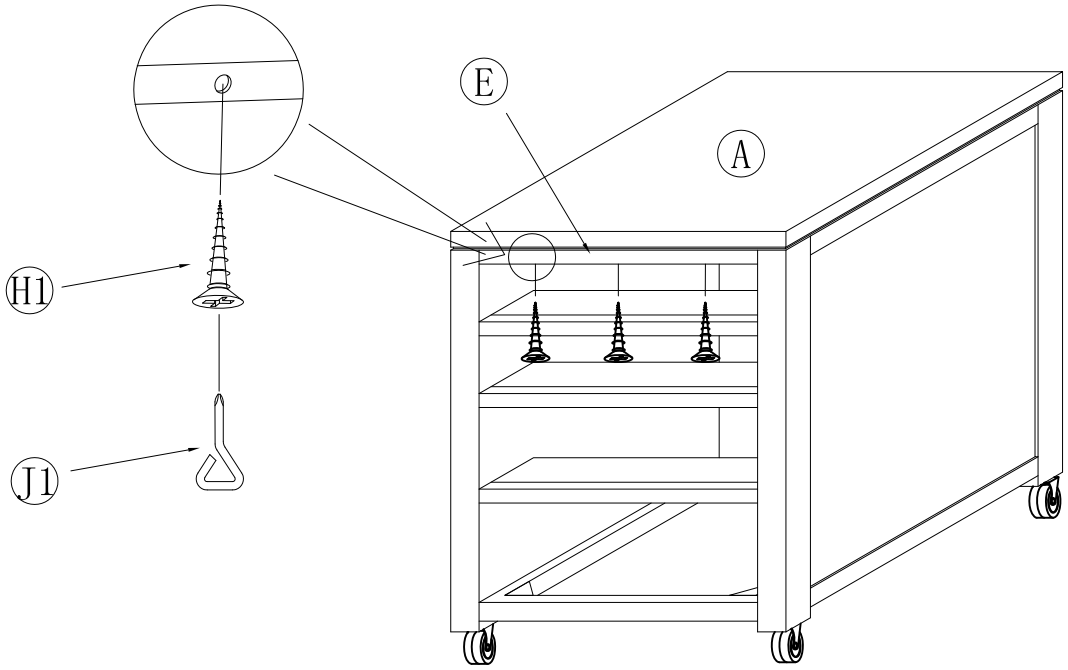

9). ASSEMBLE THE ADORNING PANEL(E).

- ROTATE 3 SCREWS(H1) INTO THE HOLES IN THE ADORNING PANEL(E).

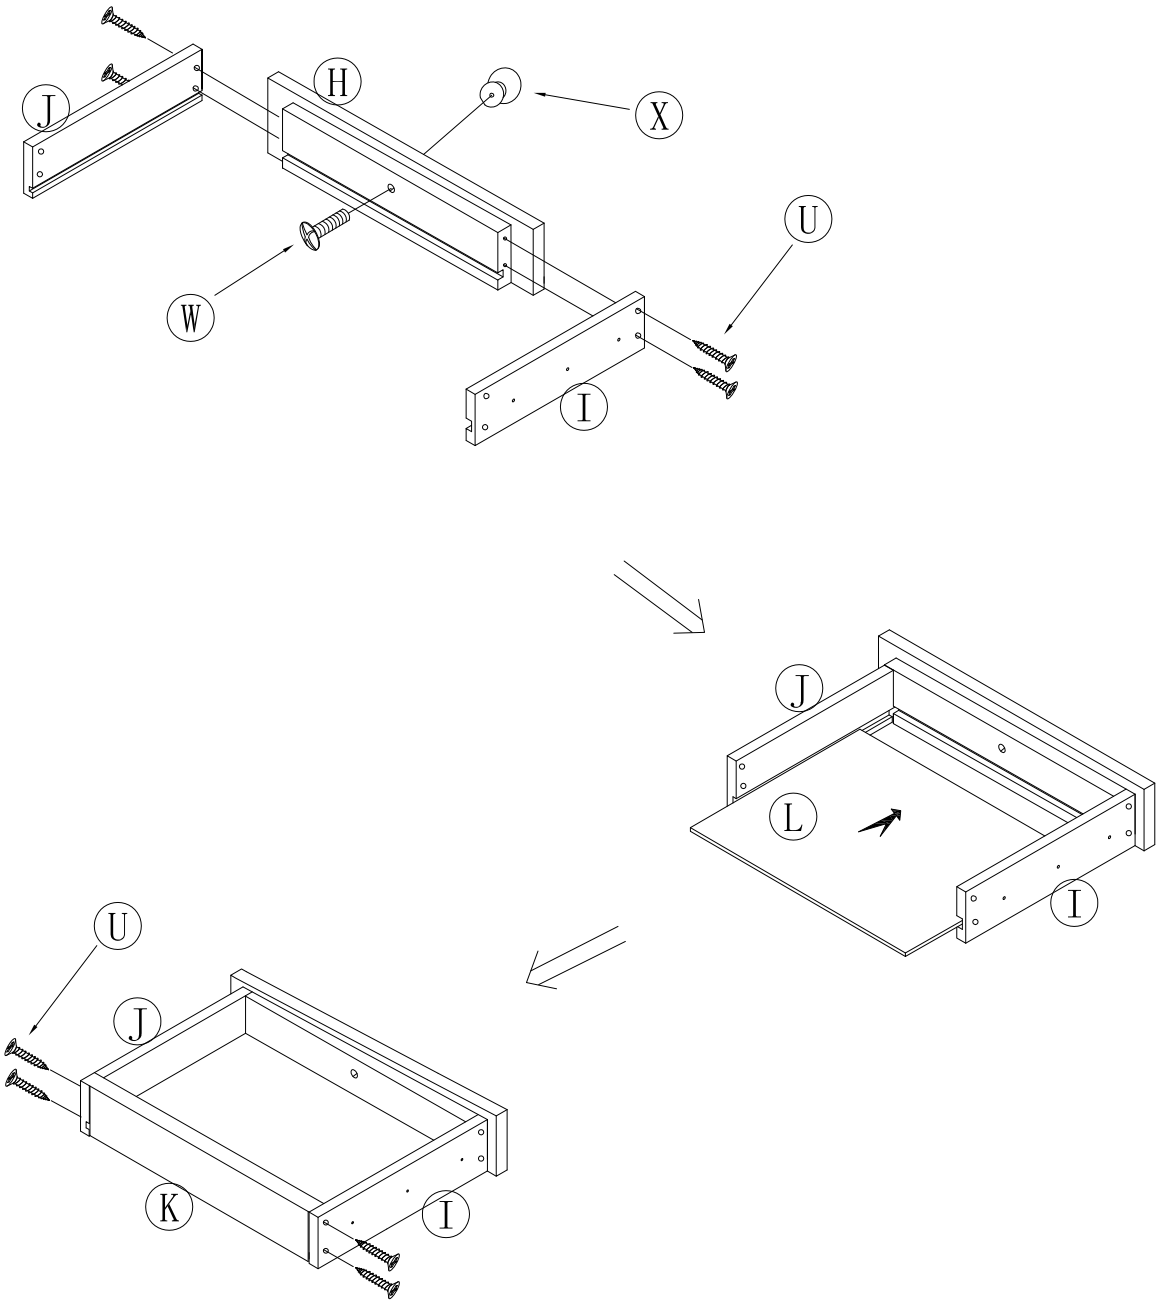

10). ASSEMBLE THE SMALL DRAWER.

- ATTACH THE SMALL DRAWER PANEL SIDE(I/J) TO SMALL DRAWER PANEL FRONT(H) USING 4 SCREWS(U).
- ATTACH THE KNOB(X) TO SMALL DRAWER PANEL FRONT(H) USING 1 SCREW(W).
- INSERT THE DRAWER PANEL BOTTOM(L) INTO THE SLOTS IN THE SAMLL DRAWER PANEL SIDES(I/J).
- ATTACH THE SMALL DRAWER PANEL BACK(K) BETWEEN SMALL DRAWER LEFT PANEL SIDE(I) AND SMALL DRAWER RIGHT PANEL SIDE(J) USING 4 SCREWS(U).

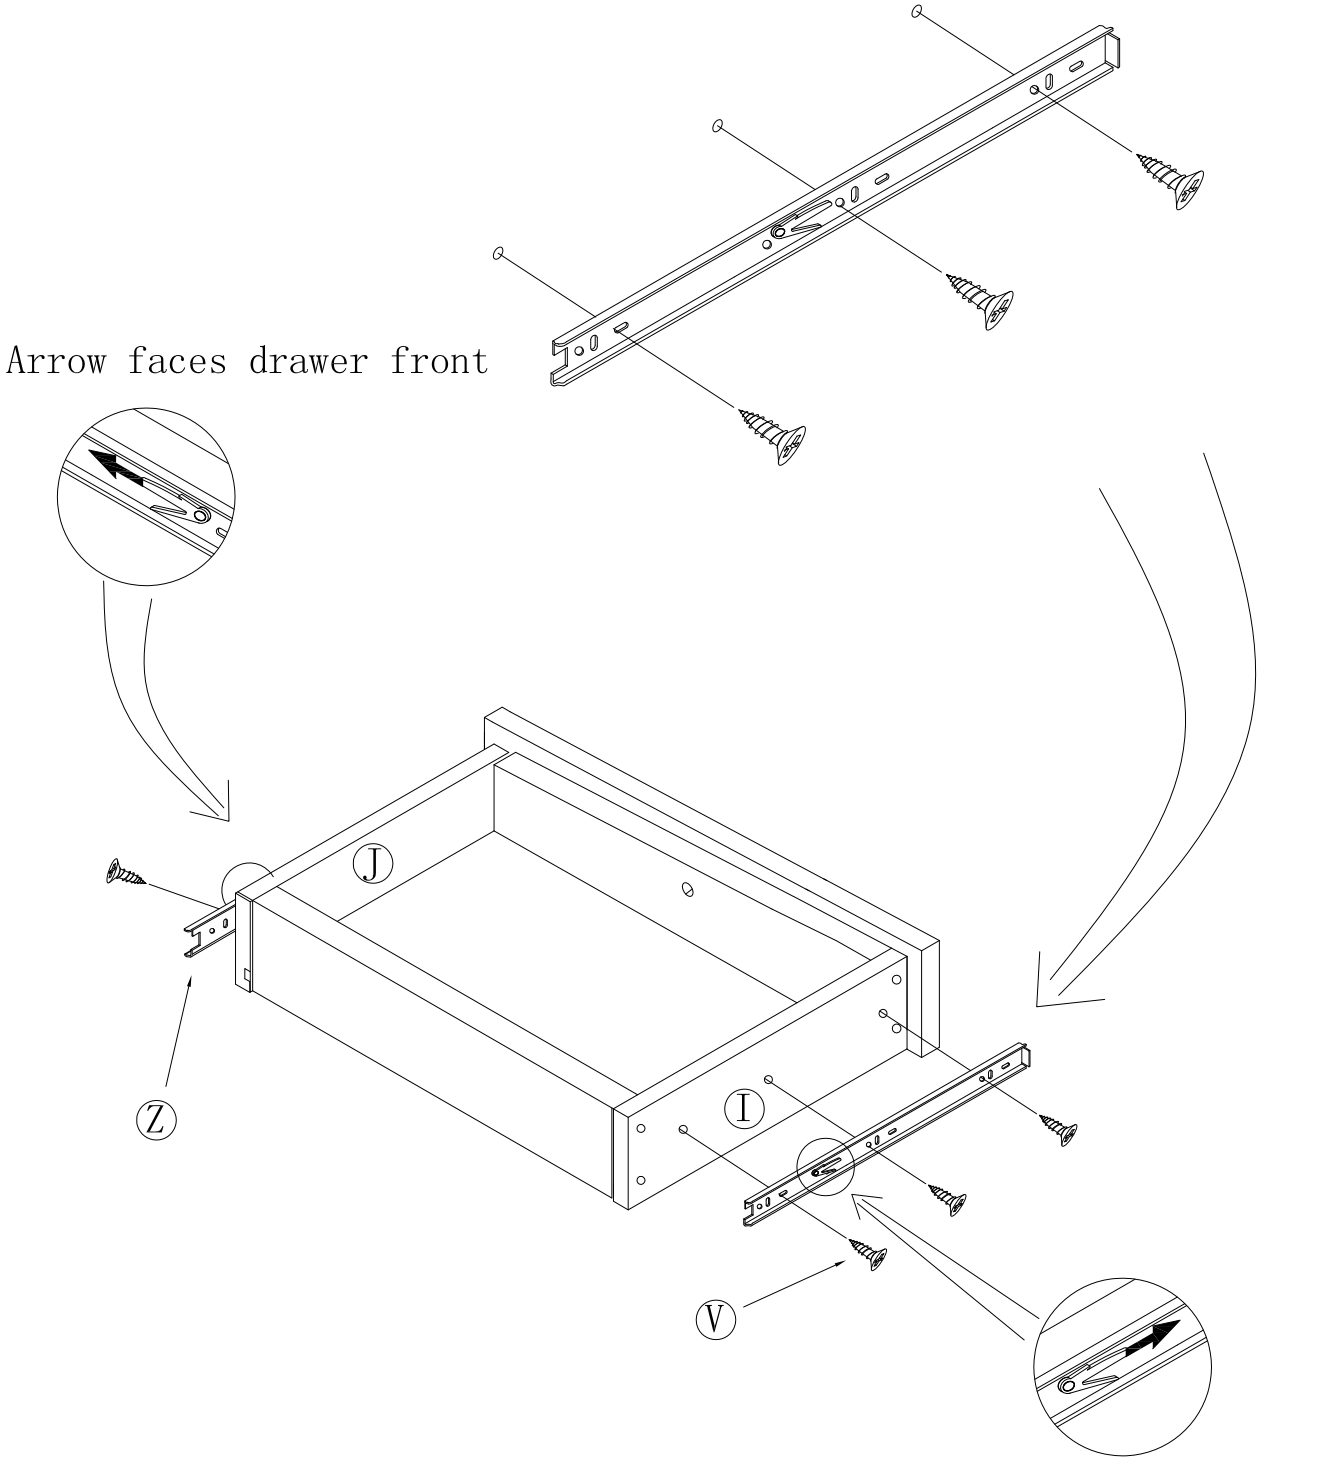

11). ASSEMBLE THE INNER SLIDES(Z).

● ATTACH THE 2 INNER SLIDES(Z) TO SMALL DRAWER PANEL SIDE(I/J) USING 6 SCREWS(V).

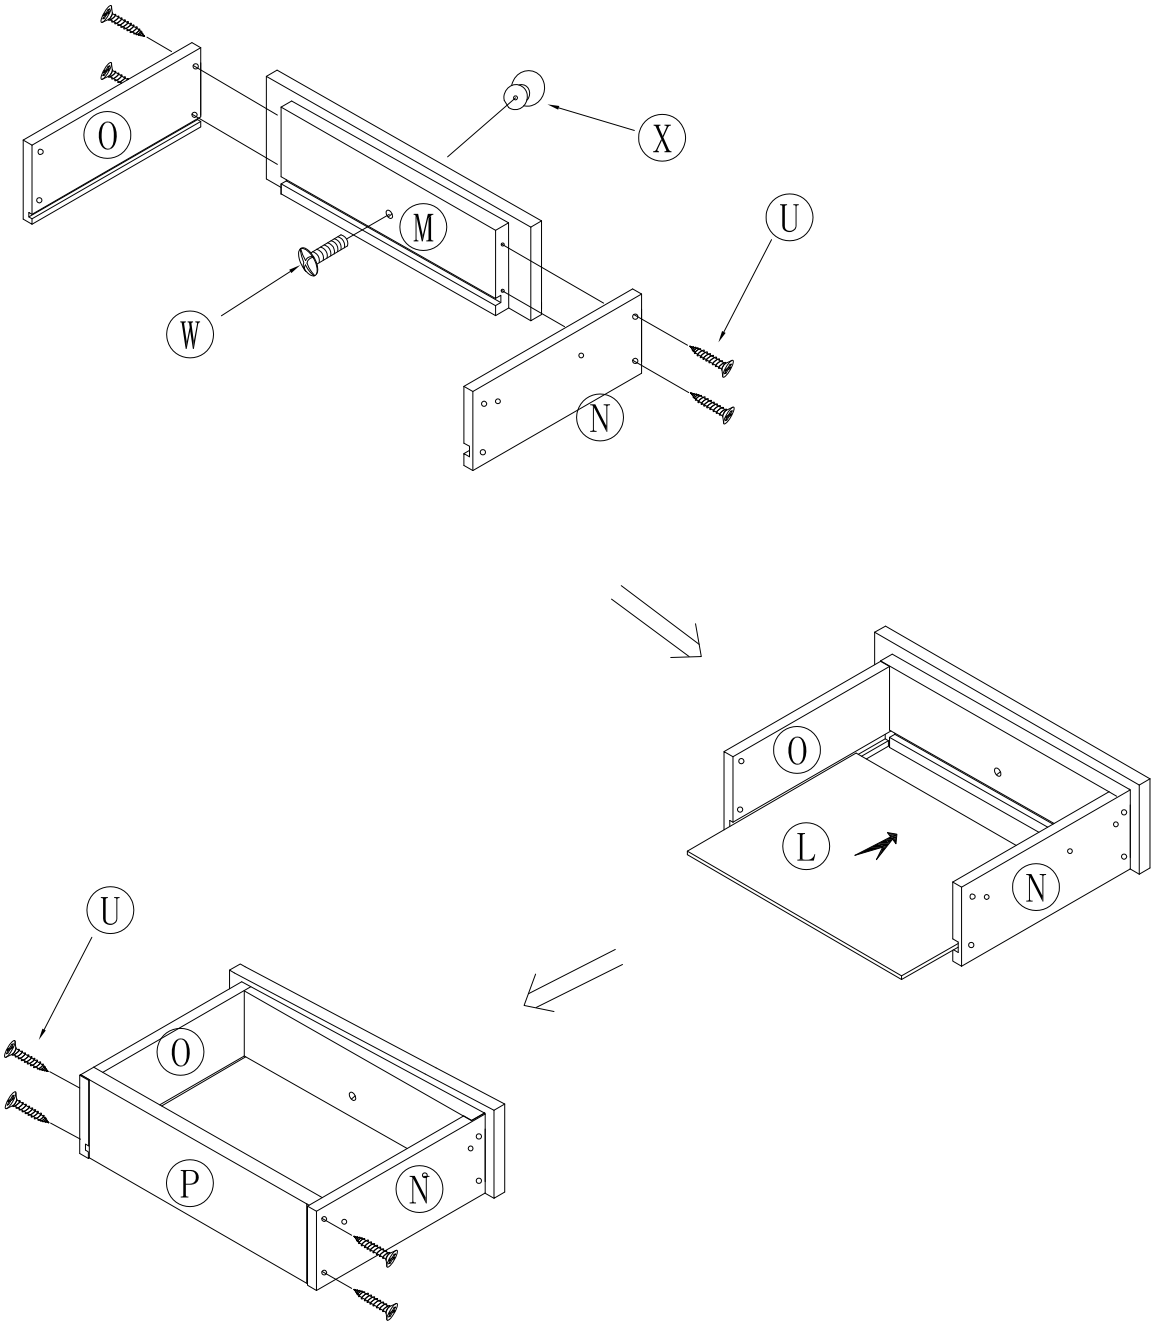

12). ASSEMBLE THE LARGE DRAWER.

- ATTACH THE LARGE DRAWER PANEL SIDE(N/O) TO LARGE DRAWER PANEL FRONT(M) USING 4 SCREWS(U).
- ATTACH THE KNOB(X) TO LARGE DRAWER PANEL FRONT(M) USING 1 SCREW(W).
- INSERT THE DRAWER PANEL BOTTOM(L) INTO THE SLOTS IN THE LARGE DRAWER PANEL SIDES(N/O).
- ATTACH THE LARGE DRAWER PANEL BACK(P) BETWEEN LARGE DRAWER LEFT PANEL SIDE(N) AND LARGE DRAWER RIGHT PANEL SIDE(O) USING 4 SCREWS(U).

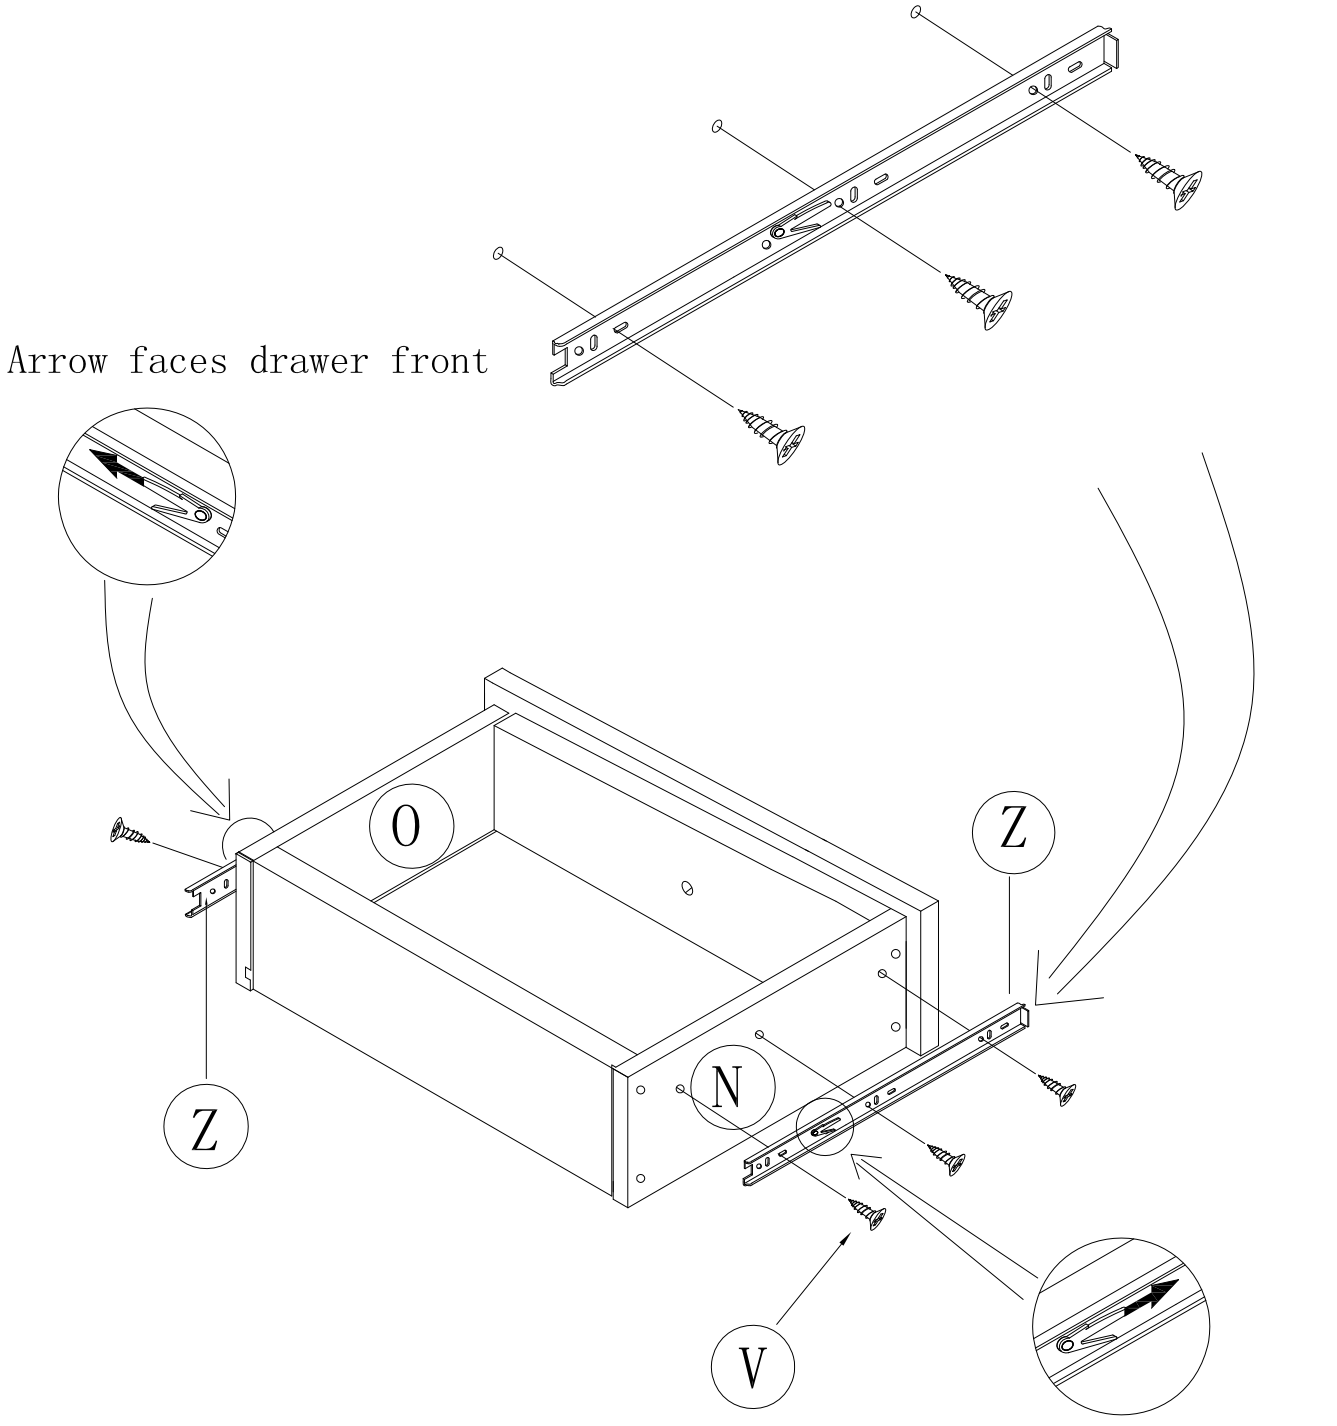

13). ASSEMBLE THE INNER SLIDES(Z).

● ATTACH THE 2 INNER SLIDES(Z) TO LARGE DRAWER PANEL SIDE(N/O) USING 6 SCREWS(V).

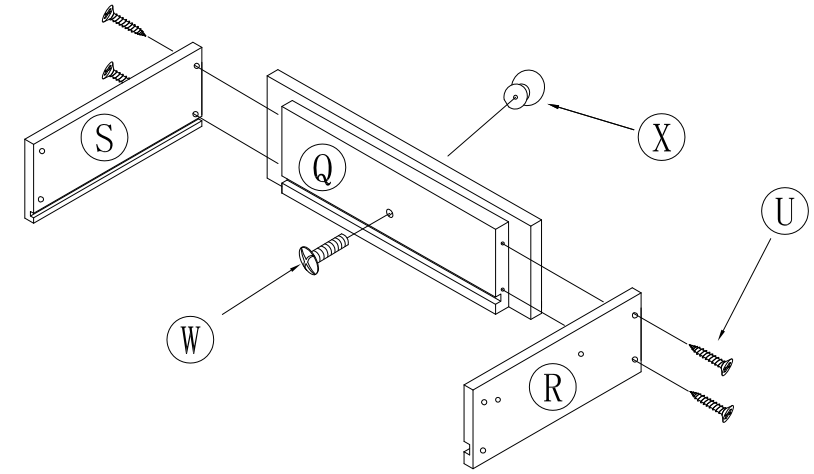

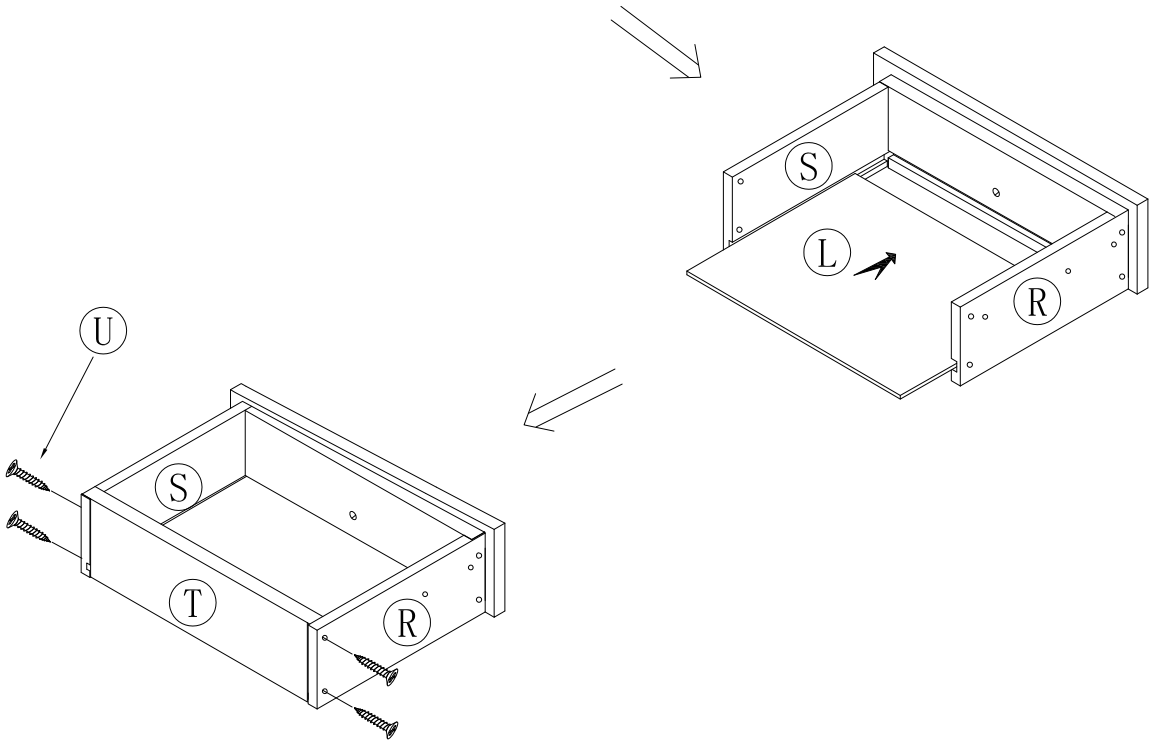

14). ASSEMBLE THE MIDDLE DRAWER.

- ATTACH THE MIDDLE DRAWER PANEL SIDE(R/S) TO MIDDLE DRAWER PANEL FRONT(Q) USING 4 SCREWS(U).
- ATTACH THE KNOB(X) TO MIDDLE DRAWER PANEL FRONT(Q) USING 1 SCREW(W).
- INSERT THE DRAWER PANEL BOTTOM(L) INTO THE SLOTS IN THE MIDDLE DRAWER PANEL SIDES(R/S).
- ATTACH THE MIDDLE DRAWER PANEL BACK(T) BETWEEN MIDDLE DRAWER LEFT PANEL SIDE(R) AND MIDDLE DRAWER RIGHT PANEL SIDE(S) USING 4 SCREWS(U).

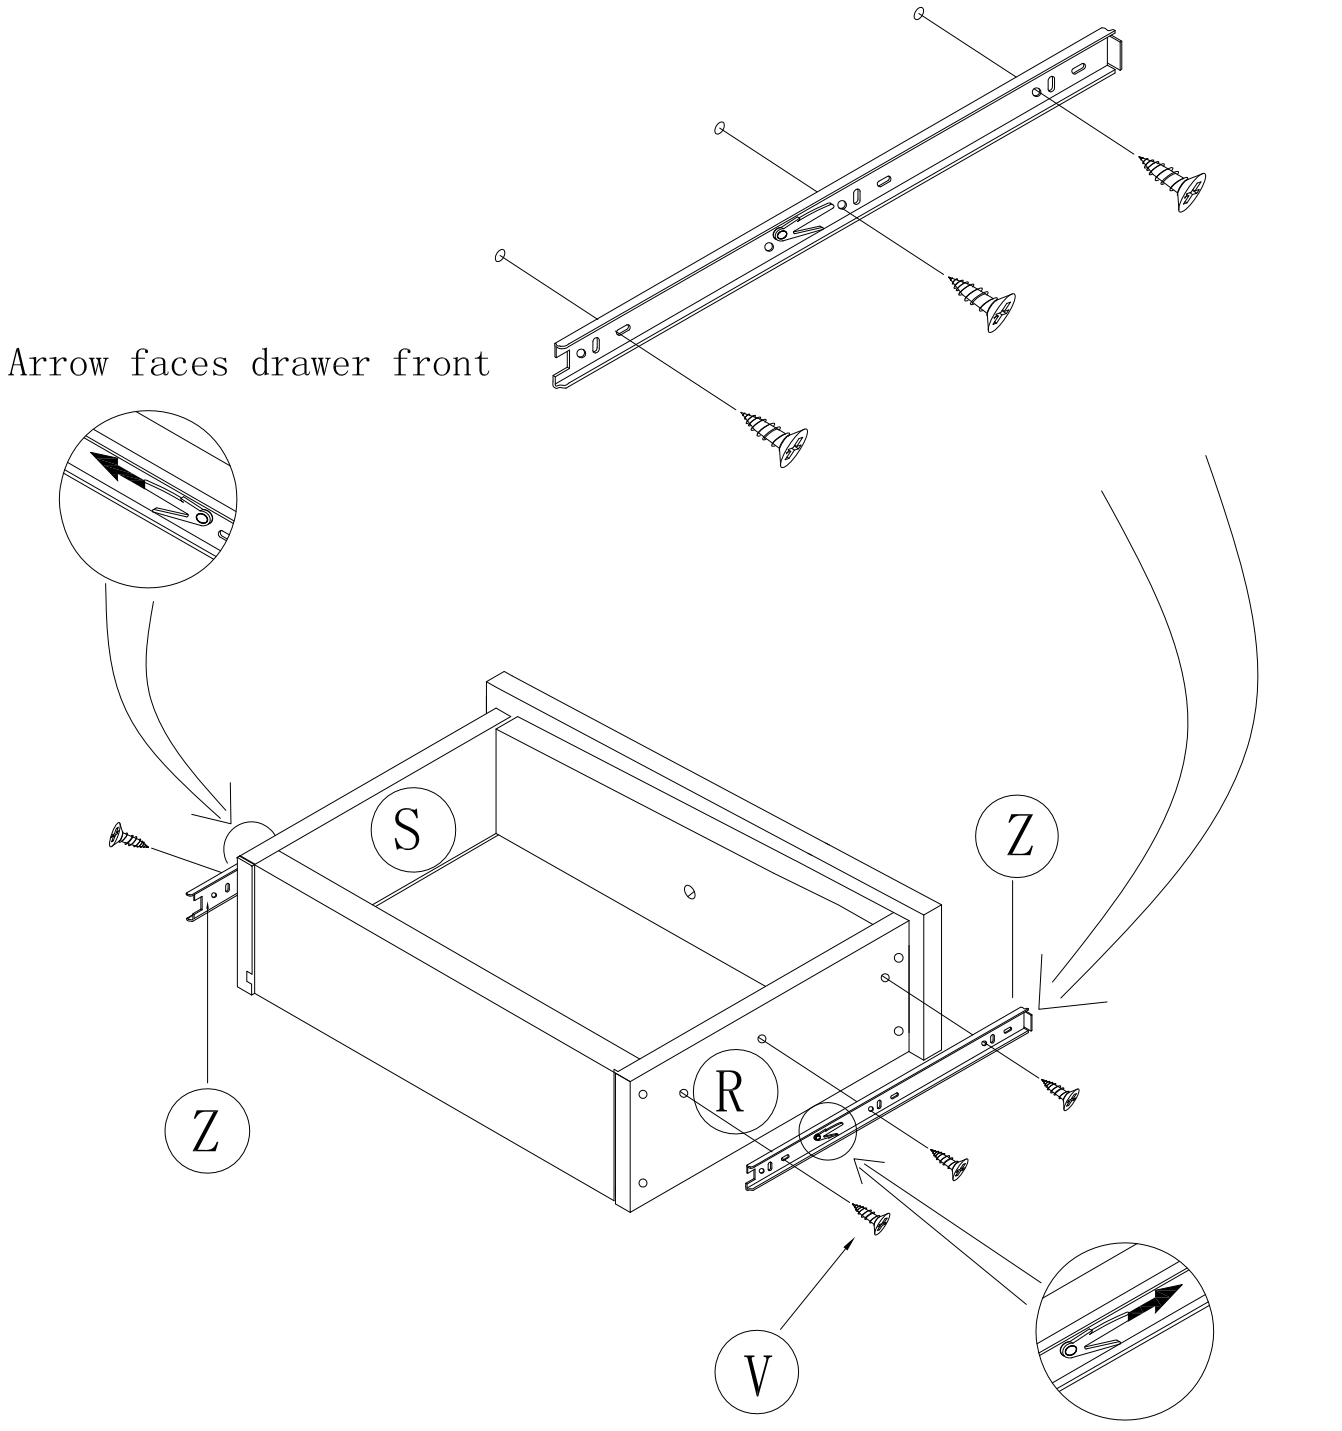

15). ASSEMBLE THE INNER SLIDES(Z).

● ATTACH THE 2 INNER SLIDES(Z) TO MIDDLE DRAWER PANEL SIDE(R/S) USING 6 SCREWS(V).

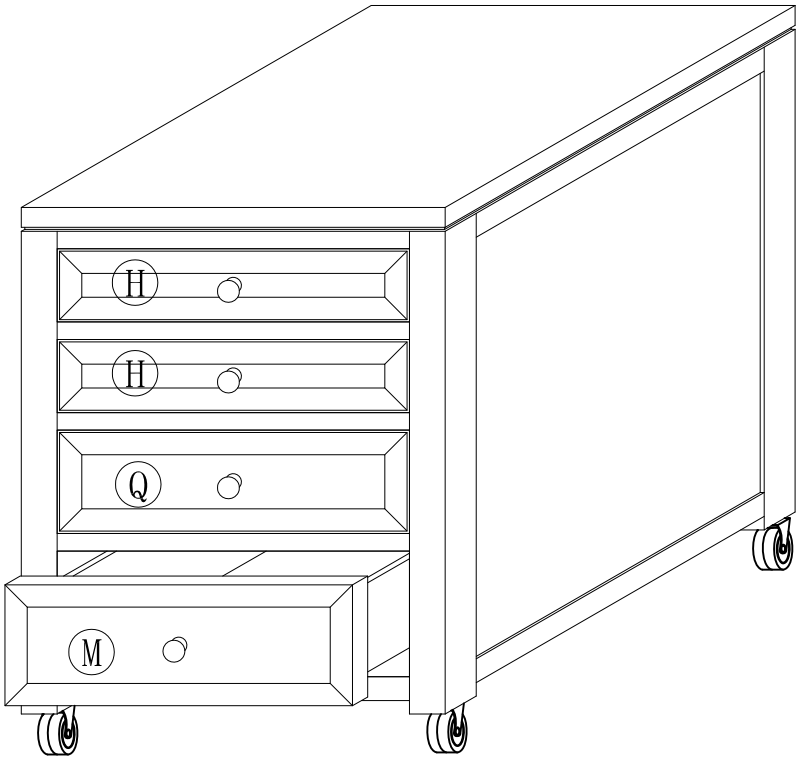

16). ASSEMBLE THE DRAWERS.

- INSERT 4 DRAWERS INTO THE SLIDERS.